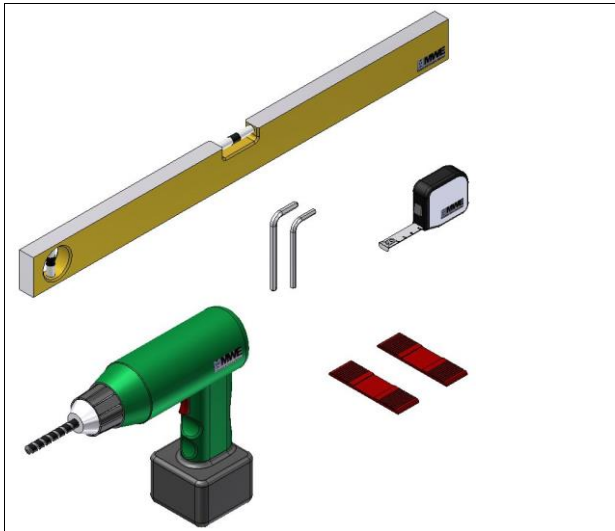
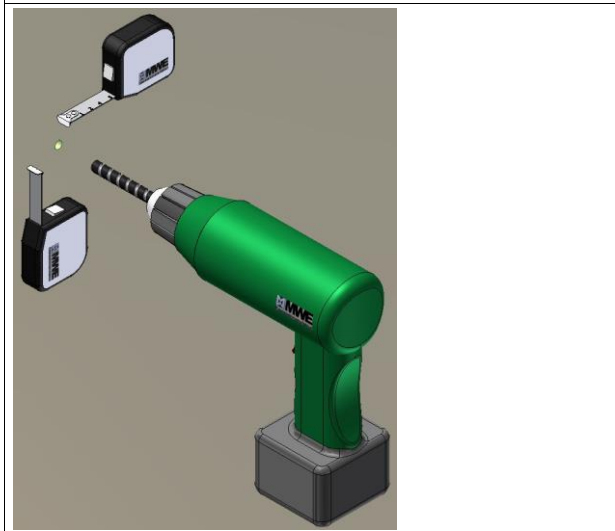
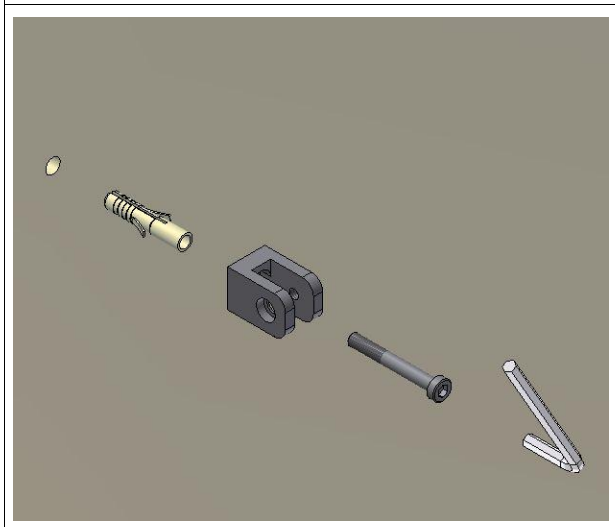


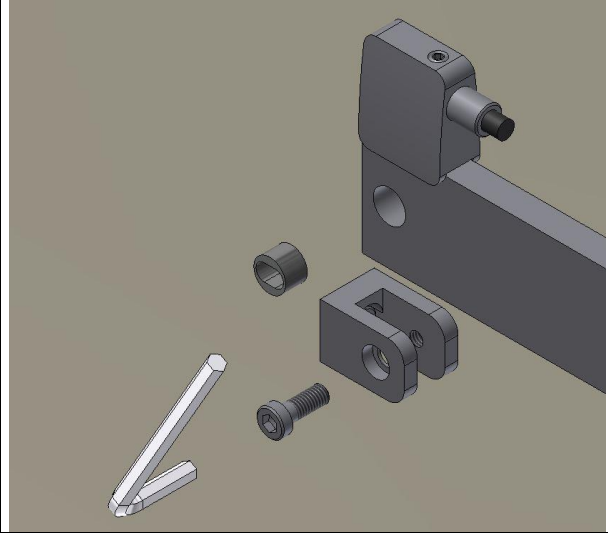
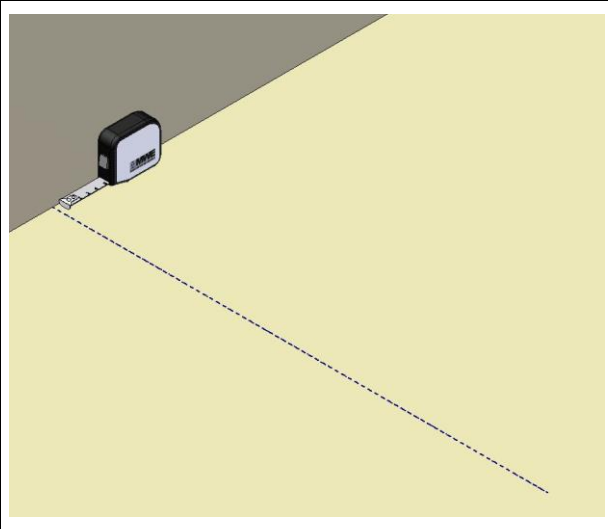
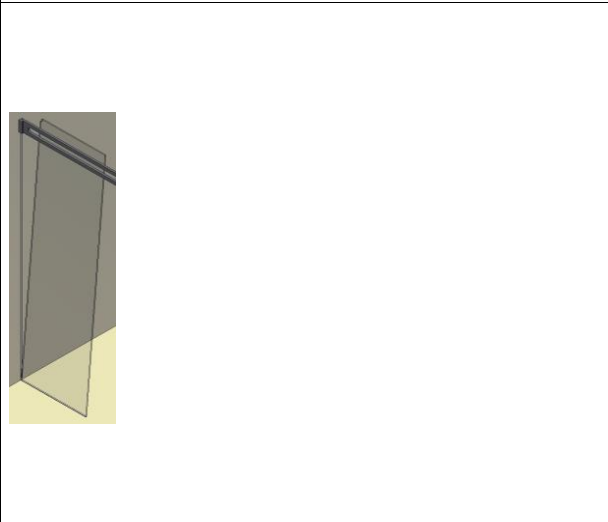
Installation Instructions

Claro (DU.1014.Claro)

	<h2>TOOLS</h2> <ul style="list-style-type: none">- Spirit level- Tape measure / folding rule- Drilling machine- Stone drill D = 8mm / D = 10mm- Allen key set- Shims <p>Observe the safety instructions of the drill before installation</p>
	<h2>1</h2> <h3>Preparing the wall</h3> <p>Before the first wall drilling must be the highest point be determined from the top shower tray with suitable tools. From this point, the height becomes the rail mounting accordingly the detailed planning as well as the lateral distances. The wall bores can be drilled. Drill holes dowel-appropriate, Drill D = 8mm.</p>
	<h2>2</h2> <h3>Mount front side mounting</h3> <p>Screw the front side fixing to the wall with the enclosed fixing material, wood screw and UX dowels.</p>

Installation Instructions

Claro (DU.1014.Claro)

	<p>3 Secure track</p> <p>Screw the rail to the front side mounting using the enclosed fastening material. Plastic sleeve with the slot is used for adjustment. The free corner should be supported. !DANGER! The support should only be removed when the fixed glasses are mounted.</p>
	<p>4 Determine fixed glass position</p> <p>Before the fixed glass can be set up, the positions must be determined and marked according to the detailed design</p> <p>.</p>
	<p>5 Set up the glass</p> <p>The glass is placed and set up on transparent glass supports, taking into account the distances to the wall and the shower tray specified in the detailed planning. Now it can be connected by means of the enclosed Glasklemhalter with the running rail. The glass is sealed laterally and below with silicone.</p>

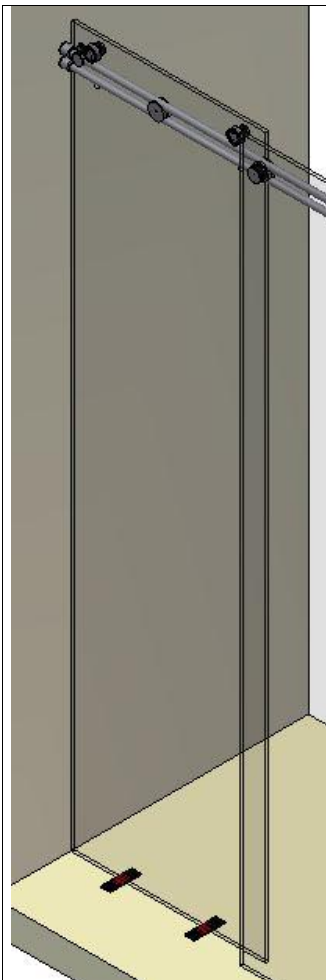
Installation Instructions

Claro (DU.1014.Claro)

	<p>8 Mount rollers at the top</p> <p>Place door leaf on mounting brackets if possible. The fitting side should point upwards. Dismantle the glass fixings on the trolley. Then place spacers of the glass fixtures on the glass bores. Place the roll on and secure it from below with the help of the glass fixing lid. Plastic - Do not lose the eccentric sleeve of the glass fixtures! Balance any borehole / position tolerances to the upper edge of the glass with the eccentric bushing.</p> <p>The screws must be with one Fuse adhesive are used!</p>
--	---

Installation Instructions

Claro (DU.1014.Claro)

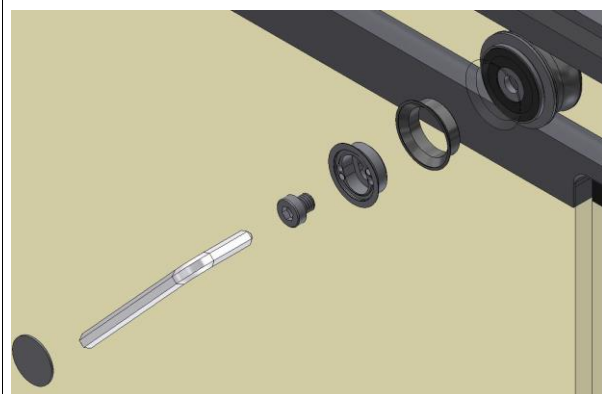


7

Set up the door leaf

Hang the preassembled sliding door onto the track. For safety and adjustment of the soil air (7mm) place the glass blocks on the floor under the sliding door leaf. Then remove shims

The door leaf can be lifted off the running rail until the lift-out safety device is installed. For safety, the door leaf should be supported until the lift-out safety device is mounted.



8

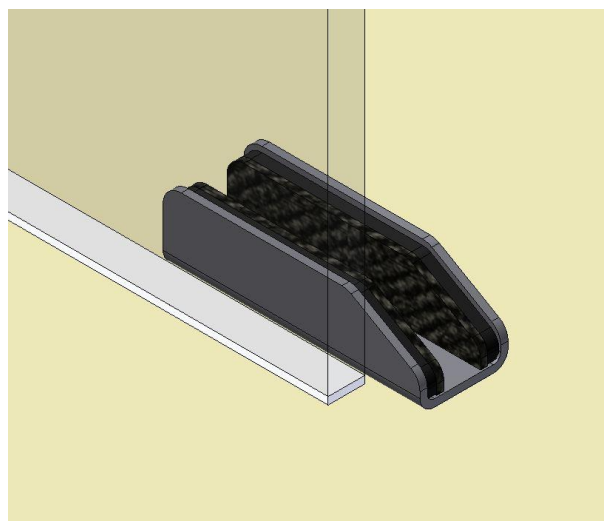
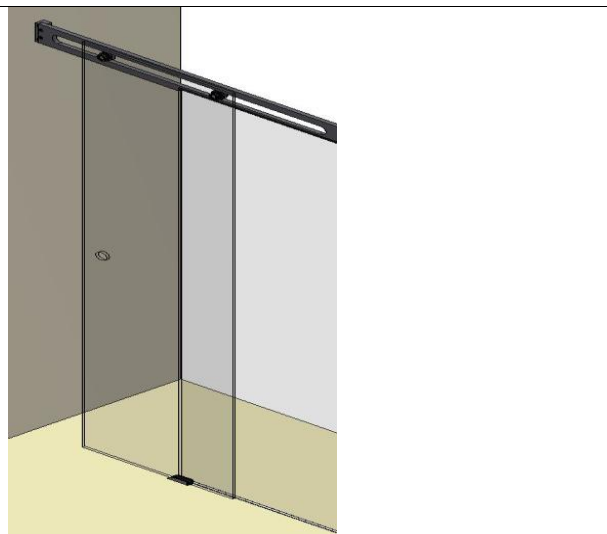
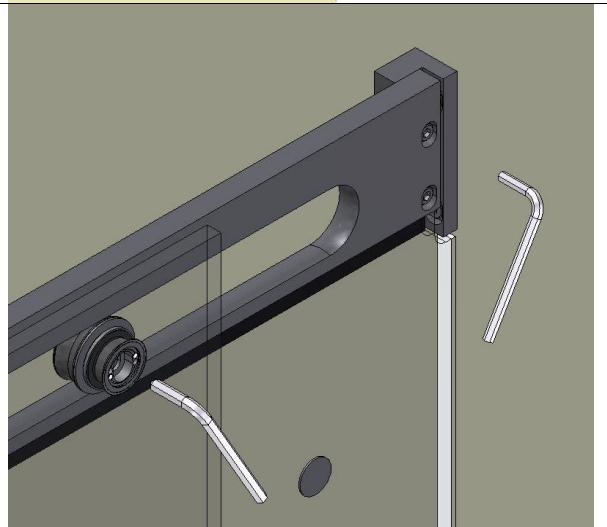
Fasten Wheel

Put the wheels in front of the countersunk hole of the glasses. Subsequently, the point holder is screwed with the enclosed mounting material. The glass blocks can be removed.

Do not lose the plastic sleeve of the glass attachment!

Installation Instructions

Claro (DU.1014.Claro)

	<p>9 Position floor guide</p> <p>The floor guide is mounted with appropriate mounting material on the shower tray.</p>
	<p>10 Check shower doors</p> <p>Check the flow of the shower doors. The grip clams can now be mounted.</p>
	<p>11 Tighten screw connections</p> <p>After completion of assembly, retighten all screws and close the covers of the rollers.</p> <p>The festive glasses should be to the shower tray and the wall with e.g. Silicone sealed.</p> <p>Attention! For coated walls and shower trays, a bond by e.g. Silicone may not be suitable.</p>